

## **ATTENTION TO THE INSTALLING TECHNICIAN**

INSTALLATION REQUIREMENTS:  
FAILURE TO FOLLOW THESE SIMPLE PROCEDURES WHEN INSTALLING OUR  
TRANSMISSION CAN CAUSE PREMATURE FAILURE ON THE UNIT AND

### **WILL VOID THE WARRANTY**

WHEN THESE TRANSMISSIONS FAIL THEY WILL ALWAYS LEAVE  
CONTAMINATION IN THE A.T.F. COOLER AND LINES. AFTER THE REMOVAL OF  
THE OLD TRANSMISSION AND BEFORE THE INSTALIATION OF OUR UNIT,  
FLUSH THE SYSTEM THOUROUGHLY. THIS CAN BE DONE WITH A FLUSHER  
DESIGNED FOR THE PURPOSE OR BRAKE CLEANER AND AIR PRESSURE. WHAT  
IS IMPORTANT IS THAT ALL CONTAMINATION IS REMOVED BEFORE  
INSTALLATION OF OUR UNIT..

### **SUPPLIED UNIT MUST BE SERVICED UPON INSTALLATION**

### **FAILURE TO COMPLY WITH FIRST SERVICE WILL VOID WARRANTY**

---

#### **NOTE:-**

**IT IS HIGHLY RECOMMENDED THE THE TORQUE  
CONVERTER/PUMP AND OUTPUT OIL SEALS BE REPLACED,  
THESES ARE NOT COVERED UNDER WARRANTY**

**EXTERNAL ELECTRICAL COMPONENTS ARE NOT COVERED  
UNDER WARRANTY.**



**A.B.N:- 81 670 584 242**  
**18 George Crescent, Alice Springs NT 0870**  
**Ph (08) 8952 8684 Fax (08) 8952 2165**  
**Email:- parts.motormotion@gmail.com**